

G6S User Manual

V1.6

ATTENTION!

Do not disassemble the device. Do not touch before unplugging the power supply if the device is damaged, the power supply cables are not isolated or the isolation is damaged.

All wireless data transferring devices produce interference that may affect other devices which are placed nearby.

The device may be connected only by qualified individuals.

The device must be firmly fastened in the predefined location.

The device is susceptible to water and humidity.

INSTRUCTIONS OF SAFETY

This chapter contains information on how to operate "G6S" safely.

BY following these requirements and recommendations you will avoid dangerous situations. You must read these instructions carefully and follow the strictly before operating the device!

The device uses a 8V-32V DC power supply. The nominal voltage is 12V DC. It is advised to transport the device in an impact-proof package.

Before usage, the device should be placed so that its LED indicators are visible, which show what status of operation the device is in.

When connecting the connection cables to the vehicle, the appropriate jumpers of the power supply of the vehicle should be disconnected.

Before dismounting the device from the vehicle, the connection must be disconnected.

LEGAL NOTICE

Copyright © 2013 Al Tareeq

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Al Tareeq is prohibited.

1-Wire is a registered trademark of Dallas Semiconductor.

Other products and company names mentioned herein may be trademarks or trade names of their respective owners.

INTRODUCTION

The G6S Feature Rich Powerful GPS Tracker is the latest solution for track and trace applications and extreme level fleet management.

G6S is designed for service providers, integrators, and enterprise customers to enhance mobile resources and improve their dispatch system; the G6S is a dependable quad-band GSM/GPRS tracking device, delivering the key features fulfilling the most demanding applications: fleet management, insurance telemetric, dispatch, vehicle location and recovery, and more.

With accurate GPS location performance, a robust programmable rules engine, 2-axis accelerometer for measuring driver behavior and vehicle impacts, geo-fencing, messaging and much more, the G6S is designed for powerful solution deployment. The G6S also includes optional routing and optimization with Garmin® FMI (Fleet Management Interface) - a key part of today's fleet management.

The G6S is powered by over-the-air device management and maintenance system, (Programming, Updates, and Logistics System). FOTA (Firmware update over the air), GSM Jamming detection and 156 hardware based geo-fences makes this the perfect choice for superior safety and security of your vehicle.

Contents


ATTENTION!	2
INSTRUCTIONS OF SAFETY	2
LEGAL NOTICE	3
INTRODUCTION	3
1. Packing List	5
2. Specifications	6
3. Overview	7
4. Installation	9
5. I/O Connector	11
6. LED Indicator Behavior	12
7. User Command	13
8. Message Explanation	15
Appendix	18
Optional accessory	18

1. Packing List


■Standard

The G6S box is packaged with all the components that is necessary for operation, it contains:

G6S device x1

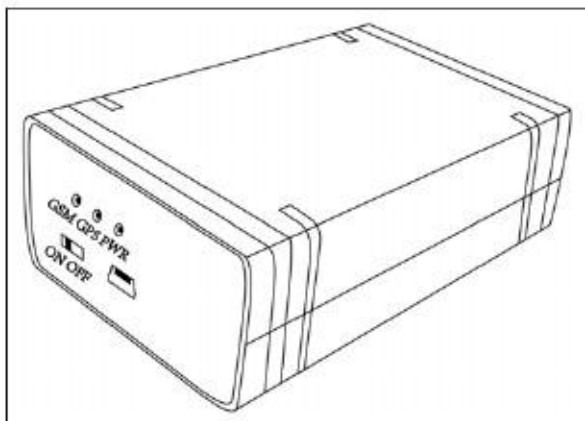

2*8/2*5 PIN I/O connector cable x1

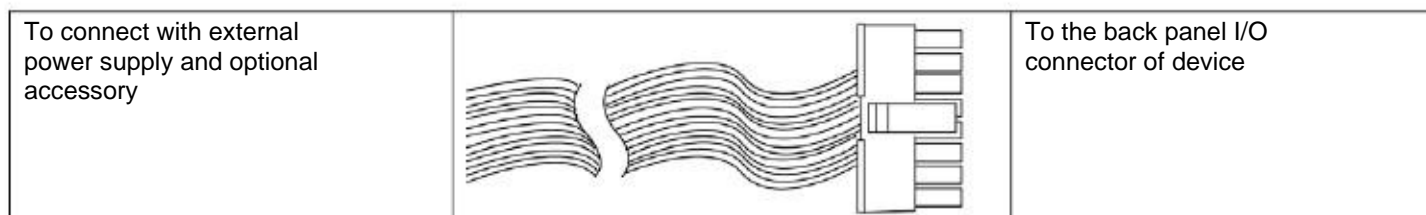

NOTE: SIM card which for GSM/GPRS connectivity is not supplied in the package, please consult your local SIM provider for further information.

■Optional accessory

Name	Purpose
USB cable	To configure device via configuration tool on computer
External GPS antenna	It helps to fix GPS faster
Microphone	It enables device for voice monitoring features
*Speaker	It enables device for voice conversation
*iButton	For driver ID verification via 1WIRE link
*DS18B20	Temperature sensor via 1WIRE link
Immobilizer	It enables the device to kill/restore engine
Panic button	Device reports or calls when this button being pressed
*DB9 cable	Communicate with computer via RS232 serial link
*GARMIN cable	Communicate with GARMIN PND
Magic tape	It helps to attach device firmly
Fuse	Protecting device from electrical surge
Backup battery	Rechargeable, Li-Po 3.7V, 250mAh

NOTE: * indicates only for G6S

Please refer chapter Appendix for further details and installation guide for optional accessory

2. Specifications

Physical	Dimension	80(L)x51.5(W)x26(H)mm	
	Weight	~75g (With battery)	
Environment	Operating temperature	-40°C~+80°C (without backup battery)	
		-10°C~+50°C (with backup battery)	
I/O connector	ACC input	1 channel	
	Digital input	2 channels	
	Analog/Digital	*2 channels	
	Digital output	3 channels	
	*1WIRE	Maxim Integrated	
	*RS232 serial link	RxD & TxD	
	Microphone	1 channel	
	*Speaker	SPK+ & SPK-	
	Mini USB	2.0	
	ARM	STM32F103UcOS	
USB	External	GSM & GPS & POWER	
		DC 8 to 32V	
CPU			
LED indicator			
Power supply			
	Backup battery	Type	Rechargeable, Li-Po 3.7V, 250mAh
Power consumption	Standby: 70mA@12V, Working: 100mA@12V		
GSM/GPRS	Antenna	Built-In	
		Cinterion BGS2-W	
	Model	Quad band: GSM 850/900/1800/1900MHz	
		Multiple-slot Class 8 (dual band)/10 (quad band)	
		GPRS class 10/Station class B	
GPS		TCP/IP over PPP	
	SIM card	1.8V & 3.3V	
	Internal antenna	25*25 with amplifier	
	External antenna	GPS Active Antenna	
	Model	uBlox NEO 6M	
	Channel	50 Parallel Channels	
	Accuracy	Autonomous<2.5M	
Sensor	Sensitivity	-162dBm	
Flash storage	Vibration sensor	Built-In	
	Accelerate sensor	Built-In, 2-axis	
Flash storage	16Mbits	Built-In, Maximum to save 8,000 GPS postions	

NOTE: * indicates only for G6S


3. Overview

3.1. Device Capabilities


- ☐ FOTA, Firmware Upgrade Over The Air
- ☐ Flexible Programming Rules
- ☐ Garmin® FMI
- ☐ 1-Wire® Interface
- ☐ GSM Jamming Detection
- ☐ Quad Band GSM Modem
- ☐ HDOP For Precise Location
- ☐ Multiple Data Upload Modes
- ☐ 2-Axis Accelerometer Sensor
- ☐ 156 Hardware Based Geo-Fence/Point of interest
- ☐ Over Speed Management
- ☐ Multiple Inputs & Outputs
- ☐ Configurable Inputs & Outputs
- ☐ Internal Backup Battery

3.2. Mechanical construction

■Front panel view

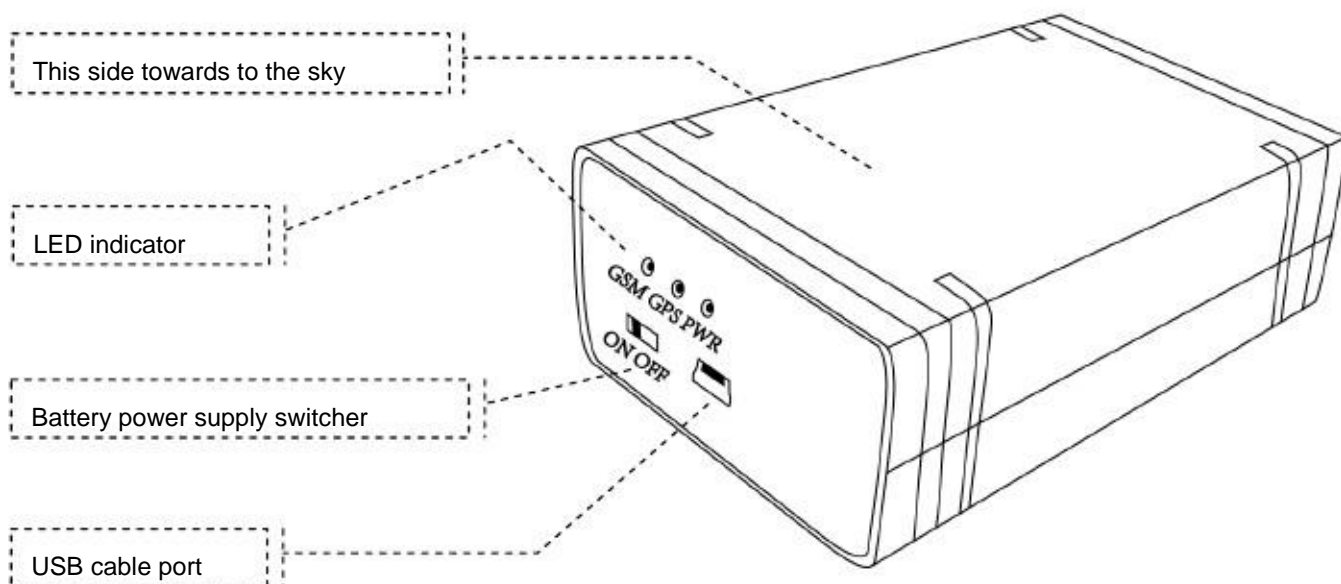

■Rear panel view

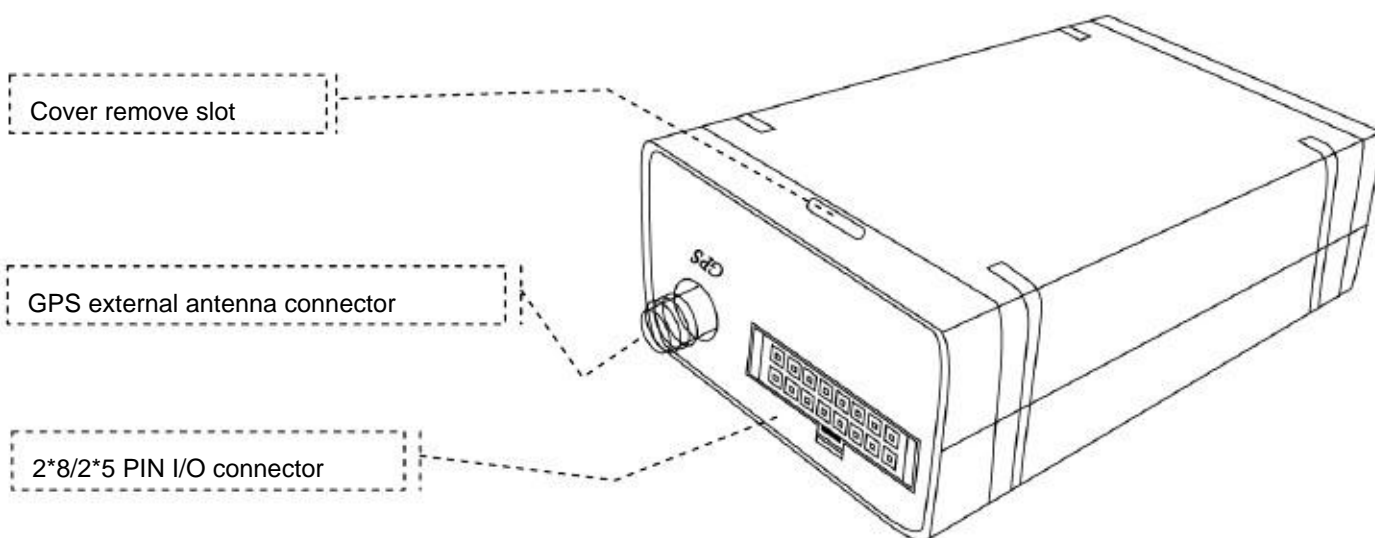


4. Installation

4.1. Remove the cover

1, On the back panel of the device, there is a small slot at the top of it.

2, Utilize a screw driver or sticker, insert it to the slot a little bit.

3, Swing the screw driver at the direction as illustrated and the cover will slide out.

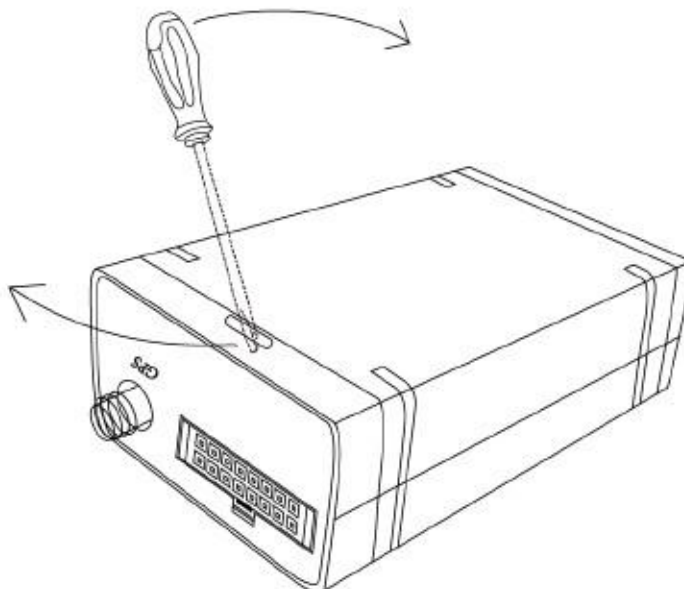


4.2. Insert the SIM card

1, Flip up cover of SIM holder, facing metal side of SIM card to the PCB board as step1.

2, Insert SIM card to cover then flip it down, pull the cover at the direction as step2 to lock up SIM card firmly.

Note: Please disconnect any kind of power source for device in advance.

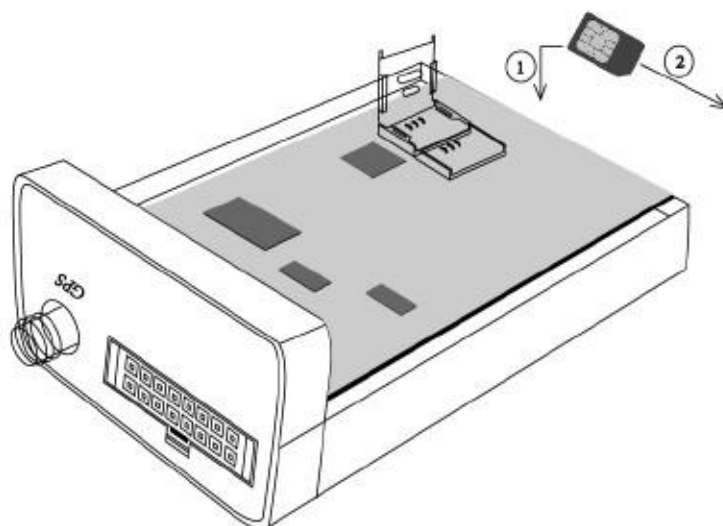

4.3. Install direction

■G6S has accident & harsh detection features that based on built-in 2-axis sensor. Its accuracy will be affected by install direction of device, please find the sticker on housing of device for recommended direction.

1, By default you need to point side "0" to the engine, which is the direction of vehicle heading.

2, If you prefer other side pointing to engine, please send command to change the default setting of installation direction.


E.g.:

Side "1" is pointing to engine,

Command to send:


1234,BDS;1

Note: 1234 is the default user password to send command, and default is 1234,BDS;0 , and please set phone number as User number before sending this command.

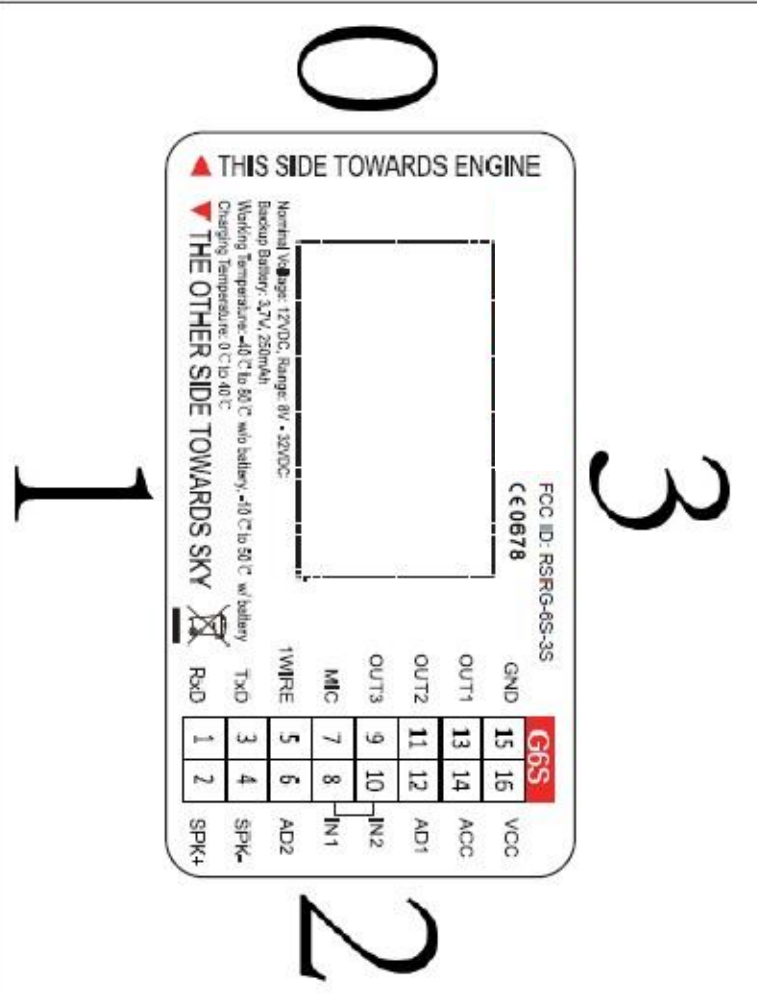

5. I/O Connector

■On the rear panel of device

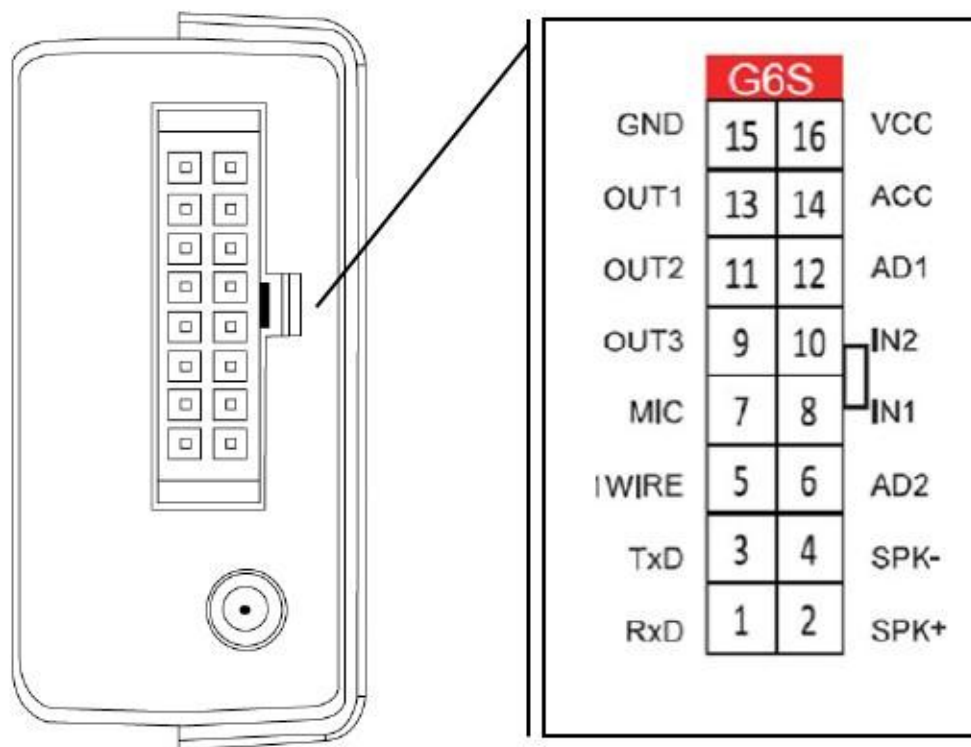

PIN definition

PIN#	Color	Name	Definition	Remark/Default
1	*Green/White	RxD	Receive serial link data	RS232
2	*Purple	SPK+	Positive (+) of speaker	
3	*White/Black	TxD	Transmit serial link data	RS232
4	*Orange/White	SPK-	Negative (-) of speaker	
5	*Yellow/Black	1WIRE	1WIRE link	
6	*Blue/White	AD2/IN4	Analog/Digital input channel	High level active (>19V)
7	Grey	MIC	Microphone	
8	Orange	IN1	Digital input channel 1	Low level active
9	Brown	OUT3	Digital output channel 3	
10	Red/Black	IN2	Digital input channel 2	Low level active
11	Yellow	OUT2	Digital output channel 2	
12	Green	AD1/IN3	Analog/Digital input channel	High level active (>6V)
13	Blue	OUT1	Digital output channel 1	
14	White	ACC	ACC/Ignition signal input	High level active
15	Black	GND	Negative (-)	
16	Red	VCC	Positive (+)	8V-32V DC

NOTE: * indicates only for G6S

6. LED Indicator Behavior

■GSM LED: Green

Server socket connected: Flash once quickly every 3 seconds



GSM network registered: Flash twice quickly in a row every 3 seconds



GSM network unregistered: Flash 3 times quickly in a row every 3 seconds



SIM card error: Flash 4 times quickly in a row every 3 seconds



Serial link communication error: Flash 5 times quickly in a row every 3 seconds



GSM module OFF: Never flash




■GPS LED: Yellow


GPS fixed: Flash once quickly every 3 seconds



GPS unfixed: Flash twice quickly in a row every 3 seconds



GPS communication error: Flash 3 times quickly in a row every 3 seconds



GSM module OFF: Never flash



■Power LED: Red

Using external power supply: Flash once quickly every 3 seconds



Using backup battery: Flash twice quickly in a row every 3 seconds




Backup battery low voltage: Flash 3 times quickly in a row every 3 seconds



Under iButton mode: Glowing constantly



Set successfully: Flash once every 1 second



7. User Command

■Set User Phone Number

There are 2 users phone supported by G6S, they have the same authorization.

User1's command words are UNO0, UPW0, USP0.

User2's command words are UNO1, UPW1, USP1.

Below will take user1 as example:

To set your cell phone number as User1 to control and receive messages from device, please send UNO command to the device, e.g.:

1234,UNO0;+8613912345678

Or

1234,UNO0;13912345678

Explanations:

1234: Default password.

UNO0: Command control word for setting user number.

+8613912345678: Phone number with country code.

13912345678: Phone number without country code.

Device is supposed to reply a confirmation SMS to you, if the device does not accept the command, it also reply a message with content: Command err.

■Modify User Password

Factory default password 1234 _____

Changing the factory password at the first usage is highly suggested.

New password should be 4 digits that from number "0-9".

To modify password, send UPW command from your USER phone number, e.g.:

1234,UPW0;5678

Explanations:

1234: Factory Password

UPW0: Command control word for setting new password

5678: New Password

■Set position report interval to user phone

Device is able to report its current position periodically according to the setting, default is every 30 minutes. To change it please send USP command, e.g.:

1234,USP0;0;30S;G;W

Explanations:

1234: User password

USP0: Command control word

0: Interval Mode, related with dynamic report condition

0: Mode0

1: Mode1

30S: Report interval

S: Second, range from 30 to 900.

M: Minute, range from 15 to 59.

H: Hour, range from 1 to 240.

G: Working mode

O: Disable periodically report to USER.

G: GPS location information as first priority, if it is invalid, will be replaced by LBS information.

S: Using LBS information only.

L: Device will voice call USER periodically for voice monitoring purpose.

W: Location information type

T: Text for current location, showing GPS coordinate.

W: Google map hyper link for current location.

8. Message Explanation

■Periodical SMS report

Below are the different kinds of message will be received by user periodically according to the setting of command USP, example on G6S.

“W” mode

1. GPS is fixed

Content of message	Explanation
G6S V1.00 LTM 2013-06-06 14:17:12 http://maps.google.com/maps?q... GSM -52dBm EXT_PWR=12.08V BAT=3.86V #30	Device name/Firmware version Date/Time Google map hyper link GSM network signal strength External power voltage Built-in battery voltage Consumed messages

There are 2 kinds of map hyper link available, static and dynamic, it depends on the setting of command USP, e.g.:

Static link:

[http://maps.google.com/staticmap?zoom=14&size=300x300&markers=%n\(,%e&sensor=false](http://maps.google.com/staticmap?zoom=14&size=300x300&markers=%n(,%e&sensor=false)

Dynamic link:

URL0;[http://maps.google.com/maps?q=%n\(,%e&t=m&z=16](http://maps.google.com/maps?q=%n(,%e&t=m&z=16)

2. GPS is not fixed

Map hyper link will be LBS (URL1) instead of GPS (URL0)

Content of message	Explanation
G6S V1.00 LTM 2013-06-06 14:17:12 http://maps.google.com/maps?q... GSM -52dBm EXT_PWR=12.08V BAT=3.86V #30	Device name/Firmware version Date/Time Google map hyper link GSM network signal strength External power voltage Built-in battery voltage Consumed messages

"T" mode

1. GPS is fixed

Content of message	Explanation
G6S V1.00 LTM 2013-06-06 09:41:22 GPS 1.55/0.50/3/4 N23.164302 E113.428456 SPD:0km/h 0 GSM -52dBm EXT_PWR=12.13V BAT=3.96V #27	Device name/Firmware version Date/Time HDOP/ALTITUDE in meter/Fixed satellite number/Time of first fixed N means north/S means south E means east/W means west Speed/Heading GSM signal strength External power voltage Built-in battery voltage Consumed messages

2. GPS is not fixed, using LBS instead

Content of message	Explanation
G6S V1.00 LTM 2013-02-28 23:51:09 MCC/MNC/LAC/CID/RSSI 460/0/2503/962C/-53dBm 460/0/2731/40F4/-60dBm 460/0/2703/4050/-70dBm GSM -58dB EXT_PWR=5.13V BAT=4.17V #20	Device name/Firmware version Date/Time Base station information type Main station, MNC/MNC/Local area code/Station ID/Signal strength Neighbor station 1 Neighbor station 2 GSM network signal strength External power voltage Built-in battery voltage Consumed messages

■Event SMS report

If an assigned event is triggered, device will send notify SMS to user according to the setting.

"W" mode

1. GPS is fixed

Content of message	Explanation
G6S V1.00 LTM 2013-06-06 14:17:12 http://maps.google.com/maps?q... ETD:6/ACC ON GSM -52dBm EXT_PWR=12.08V BAT=3.86V #301	Device name/Firmware version Date/Time Google map hyper link Event ID/User defined event name/Data GSM network signal strength External power voltage Built-in battery voltage Consumed messages

3. GPS is not fixed

Map hyper link will be LBS (URL1) instead of GPS

Content of message	Explanation
G6S V1.00 LTM 2013-06-06 14:17:12 http://maps.google.com/maps?q... ETD:6/ACC ON GSM -52dBm EXT_PWR=12.08V BAT=3.86V #301	Device name/Firmware version Date/Time Google map hyper link Event ID/User defined event name/Data GSM network signal strength External power voltage Built-in battery voltage Consumed messages

“T” mode

1, GPS is fixed

Content of message	Explanation
G6S V1.00 LTM 2013-02-28 23:51:09 GPS 1.55/0.50/3/4 N23.164302 E113.428456 SPD:0km/h 0 ETD:6/ACC ON GSM -52dBm EXT_PWR=12.13V BAT=3.96V #28	Device name/Firmware version Date/Time HDOP/ALTITUDE in meter/Fixed satellite number/Time of first fixed N means north/S means south E means east/W means west Speed/Heading Event ID/User defined event name/Data GSM network signal strength External power voltage Built-in battery voltage Consumed messages


2. GPS is not fixed, using LBS instead

Content of message	Explanation
G6S V1.00 LTM 2013-02-28 23:51:09 MCC/MNC/LAC/CID/RSSI 460/0/2503/962C/-53dBm 460/0/2731/40F4/-60dBm 460/0/2703/4050/-70dBm ETD:6/ACC ON GSM -52dBm EXT_PWR=12.13V BAT=3.96V #28	Device name/Firmware version Date/Time Base station information type Main station, MNC/MNC/Local area code/Station ID/Signal strength Neighbor station 1 Neighbor station 2 Event ID/User defined event name/Data GSM network signal strength External power voltage Built-in battery voltage Consumed messages

Appendix

Optional accessory


■USB cable

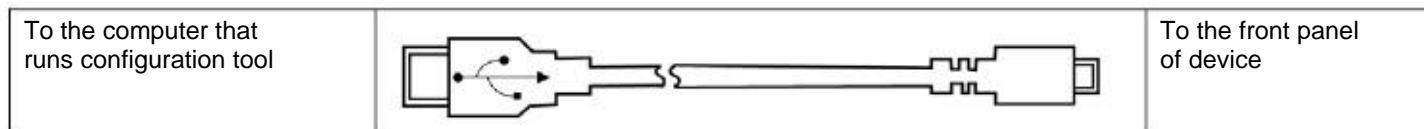

■GPS external antenna

Item		Parameter
Antenna	Center Frequency	1575.42±1MHz
	Band Width	CF±5MHz
	Polarization	RHCP
	Gain	5dBic (Zenith)
	V.S.W.R	<1.5
	Impedence	50Ω
	Axial Ratio	3dB (max)
	Dimension	25*25*300cm
LNA	Gain	28±2dB
	Noise Figure	<1.5
	Filter Insertion Loss	<3dB
	Ex-band Attenuation	12dB@CF+50MHz/16dB@CF-50MHz
	Supply Voltage	2.2~5V DC
	Current Consumption	5~15mA
	V.S.W.R	<2.0
Mechanical	Cable	RG174---3M
	Connector	SMA
	Redone Material	ABS
	Mounting Method	Magnet
Environmental	Operating Temperature	-40°C~+85°C
	Relative Humidity	Up to 95%
	Ingress Protection	IP65~IP67
	Vibration	10 to 55Hz with 1.5mm amplitude 2hours
	Environmentally Friendly	ROHS Compliant

Expose this terminal
under the sky

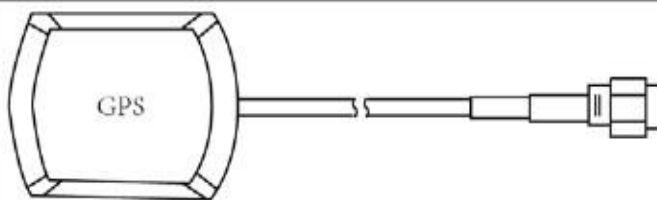

To the rear panel of device,
GPS antenna connector


■Microphone

Item	Parameter
Length	3 meters
Material	Al-Si
Output impedance	2.2Kohm
Sensitivity	-30db to 60db
Frequency	50HZ to1600HZ
Channel	Stereo

PIN15
PIN7



Black wire: To PIN15
Red wire: To PIN7

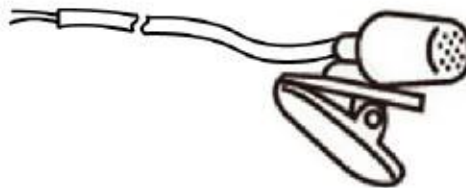

This accessory is necessary
for voice related
functionalities.


■Speaker

Item	Parameter
Length	3 meters
Impedance	16ohm
Sensitivity	96db/W
Frequency	50HZ to1600HZ
Signal to noise ratio	75db
Power consumption	1W

PIN16
PIN15
PIN4
PIN2





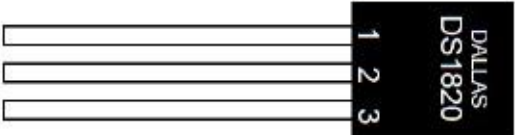


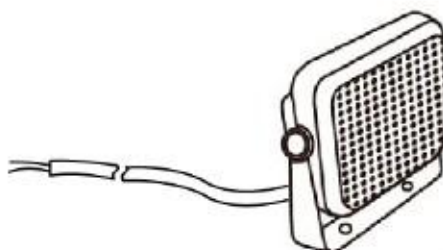Red: To PIN16
Black: To PIN15
White: To PIN4
Blue: To PIN2





This accessory is
necessary for voice
related functionalities.

■1-Wire

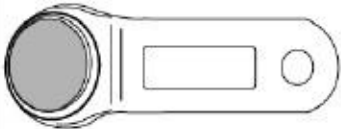

PIN15 PIN5 	White wire: To PIN15 Red wire: To PIN5 	Driver ID application 
PIN15 PIN5 	1 & 3: To PIN15 2: To PIN5 	

■Panic button

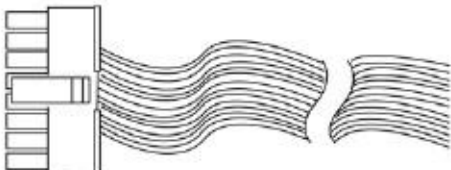PIN8/10 PIN15 	Black/White wire: To PIN8/10 Black wire: To PIN15 	Press button to send SOS message/call from G6S
--	--	--


■Fuse

This accessory protects the device when illegal power supply has been connected.

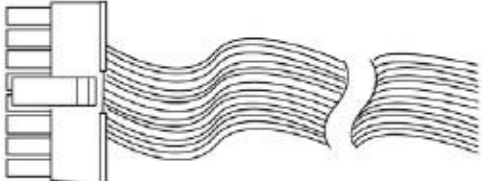
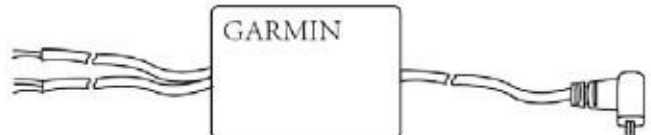
PIN16 	Red wire: PIN16 	To external power supply
---	---	-----------------------------

■RS232 to DB9

PIN1 PIN3 PIN15	Green wire: To PIN1 Yellow wire: To PIN3 Black wire: To PIN15	To Female DB9 interface
-----------------------	---	----------------------------


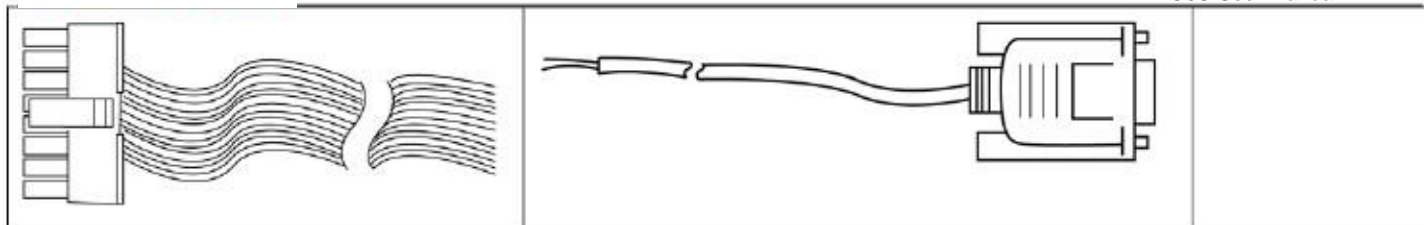


■RS232 to GARMIN interface

<p>PIN16 PIN15 PIN3 PIN1</p> 	<p>Power cable: Black: To PIN15 Red: To PIN16</p> <p>Data cable: Brown: To PIN15 White: To PIN3 Yellow: To PIN1</p> 	<p>To GARMIN PND</p>
---	---	----------------------

■Immobilizer

Immobilizer is an electronic security device fitted to an automobile that prevents the engine from running, it can be control by digital output channel from G6S
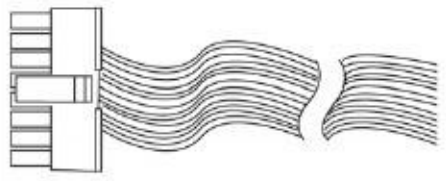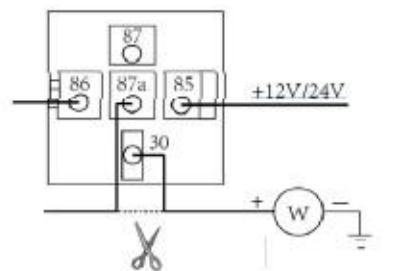
<p>PIN9/11/13</p> 	<p>85: To +12V/24V 86: To PIN9/11/13 87a & 30: Between ignition wire</p>	
--	--	---

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.